

Inspecting Railcars

Damage Prevention Paper Specialists

1. Inspect railcars prior to loading and look for...

Floor conditions; holes, cracks, nails, stones, debris and rough walls.



Broken or damaged roof seams.



Door seals that may leak and cause water damage.



Water or edge damage that could be caused by floor or wall seams.



Leaks or indicators of water problems at roof.

